


REAR SPOILER

COMPONENTS

ET

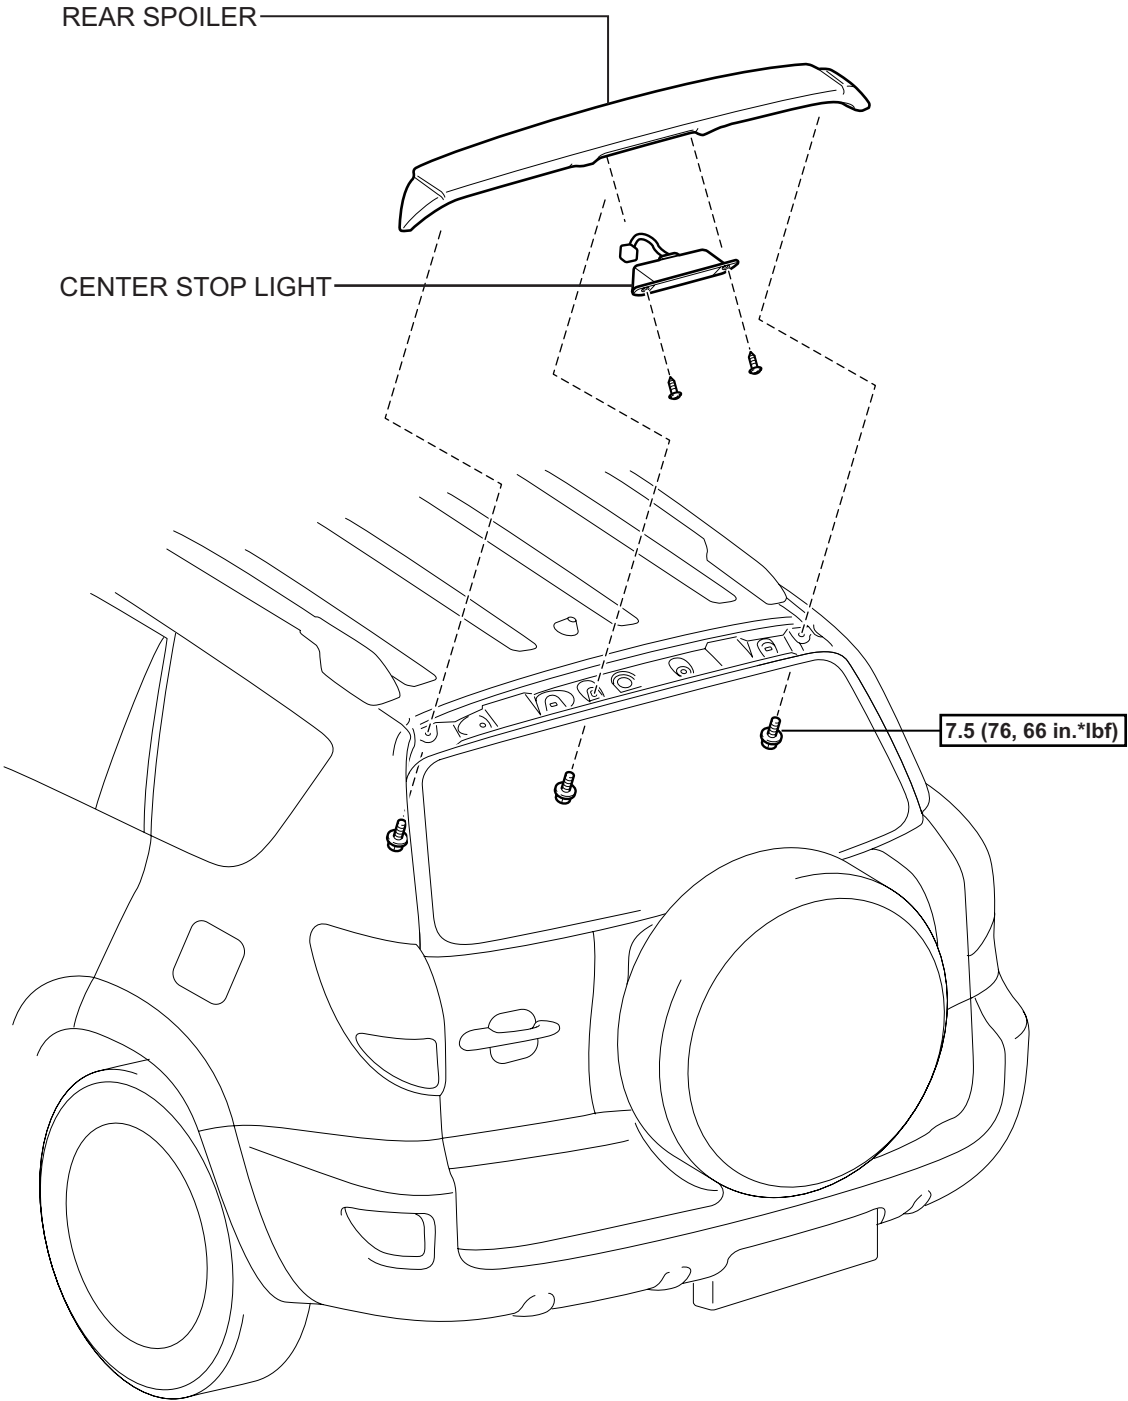

N*m (kgf*cm, ft.*lbf) : Specified torque

REMOVAL

HINT:
When removing the spoiler, heat the vehicle body and spoiler using a heat light.

Standard heating temperature

Item	Specified Condition
Vehicle body	40 to 60°C (104 to 140°F)
Spoiler	20 to 30°C (68 to 86°F)



NOTICE:
Do not heat the vehicle body and spoiler excessively.

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**


CAUTION:
Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. **REMOVE BACK DOOR CENTER GARNISH (See page ED-59)**

3. **REMOVE REAR SPOILER**
(a) Remove the 3 bolts.

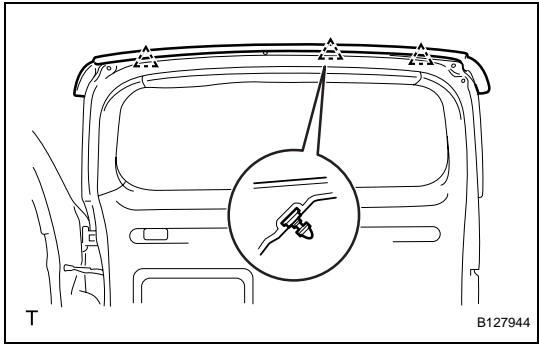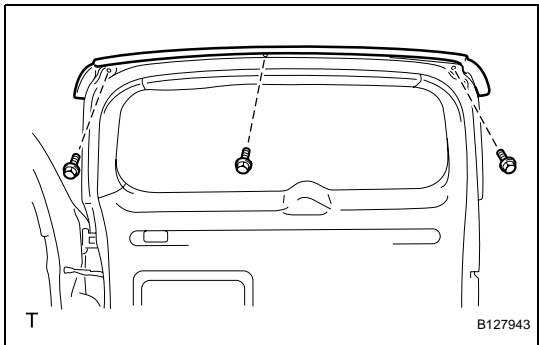

- (b) Remove the 3 clips and spoiler.
(c) Disconnect the center stop light connector and remove the rear spoiler.

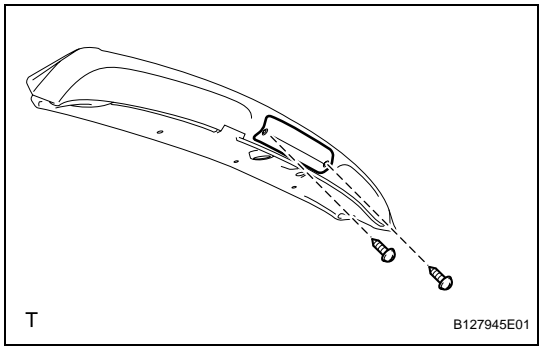

4. **REMOVE CENTER STOP LIGHT**
(a) Remove the 2 screws and center stop light.

INSTALLATION

HINT:

- When installing the spoiler, heat the vehicle body and spoiler using a heat light.

Standard heating temperature

Item	Specified Condition
Vehicle body	40 to 60°C (104 to 140°F)
Spoiler	20 to 30°C (68 to 86°F)

NOTICE:

Do not heat the body and spoiler excessively.

1. INSTALL CENTER STOP LIGHT

- (a) Install the center stop light with the 2 screws.

2. INSTALL REAR SPOILER

- (a) Clean the vehicle body surface.
 - (1) Using a heat light, heat the vehicle body surface.
- (b) If reusing the spoiler:
 - Clean the spoiler.
 - (1) Using a heat light, heat the spoiler.
- (c) Connect the center stop light connector.
- (d) Install the spoiler with 3 clips.

- (e) Install the 3 bolts.
Torque: 7.5 N*m (76 kgf*cm, 66 in.*lbf)

3. INSTALL BACK DOOR CENTER GARNISH (See page ED-67)

4. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

ET

